

# ZP-94-95 CAMPING TENT

Please Keep For Future Reference



## IMPORTANT - Please Read Instructions Fully Before Assembly Or Use

These instructions contain important information which will help you get the best from your equipment and ensure safe and correct assembly, use and maintenance. If you need help or have damaged or missing parts, call the Customer Helpline: **0330 124 0718** (Opening hours: Mon-Fri 9:00am-5:00pm) or Email: **customerservices@fit4home.co.uk**

# IMPORTANT SAFETY INFORMATION

---

## IMPORTANT SAFETY INFORMATION

**BE SURE TO READ THE ENTIRE MANUAL BEFORE YOU ASSEMBLE OR OPERATE YOUR ITEM. IN PARTICULAR, NOTE THE FOLLOWING SAFETY PRECAUTIONS:**

1. Allow at least 6m spacing between tents and caravans or other vehicles.
2. Never use fuel-burning devices (e.g., disposable barbecues, camping stoves, camping heaters, lanterns, and charcoal grills) inside a tent.
3. Never use candles in or near a tent - torches are much safer
4. Flammable liquids and Liquefied Petroleum Gas cylinders should be kept outside the tent
5. Oil burning appliances are not recommended
6. Cooking appliances should never be used in small tents
7. Never light a candle or have any other kind of flame burning apparatus in or near to a tent
8. Cook outside and away from the tent
9. Don't smoke inside the tent and keep any flammable material away from the cooking area
10. Have an escape plan

**CAUTION: Read all instructions carefully before operating this product. Retain this Owner's Manual for future reference.**

## PARTS LIST

No.	Description	Qty
01	Tent with groundsheet	1
02	Storage Bag	1
03	Canopy Pole Bag	1
04	Peg Bag	1
05	Top Sheet	1
06	Tent Pegs	1
07	Guylines with attached guyline guides	8
08	Canopy Poles	4

# ASSEMBLY INSTRUCTIONS

---

## STEP 1

Lay the tent out on the ground, where you would like your tent to be pitched.



## STEP 2

Lift the centre of the tent upwards and then push down until the tent pops into position




## STEP 3

Unfold the arms of the tent so that they are in position and your tent is fully popped up.



## STEP 4

Attach the floor sheet to the Velcro at the bottom of the tent opening and attach the guylines and peg into place.

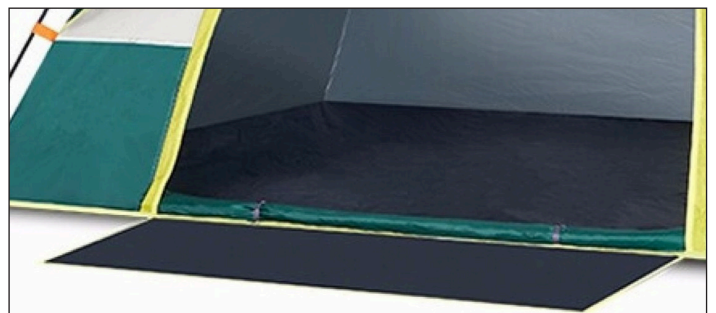

## STEP 5

To put the tent back down, squeeze the centre poles with both hands and fold the arms towards the centre.



# **FIT4HOME LTD**

---

**Fit4home is an online business which aims to provide high quality Exercise, Fitness and Outdoor products. At Fit4home we stock various items such as Tents, Garden Furniture, Treadmill, Exercise Bikes etc and aim to provide an excellent service to each and every one of our valued customers.**

**Fit4home employs a dedicated customer service team to ensure the consumer is provided with the best service and experience. For any queries or issues feel free to contact us via e-mail or phone.**

**As an online business we sell our products independently via our website, and we also trade from established markets such as Amazon and eBay. As an established business we endeavour to earn the confidence of the customer, it is for this reason that we try our utmost best to dispatch products the same day using a next working day delivery service to all UK mainland areas.**

**Along with the customer service department, Fit4home consists of hard-working and reliable technicians and designers who aim to meet the needs of our customers.**

**We offer a market leading 12 month warranty, which is simple and hassle free.**

**Fit4Home© Ltd  
Hours of Business: 9am - 5pm  
Website: [www.fit4home.co.uk](http://www.fit4home.co.uk)  
E-mail: [customerservices@fit4home.co.uk](mailto:customerservices@fit4home.co.uk)**

